

Precision Knife Set



PKS1

- 17 Piece Kit
- 3 Different Knives With 13 Blades and Steel Tweezers
- Convenient, Durable Latching Carrying Case

Includes

- Durable Latching Carrying Case
- Steel Tweezers
- Heavy-Duty Plastic Handle
- Type-A Handle
- Type-B Handle
- 13 – Misc. Blades for All Applications

ITEM#	\$	£	€	RMB	DESCRIPTION
PKS1	\$ 29.90	£ 18.80	€ 27,80	¥ 285.50	17-Piece Precision Knife Set

Laser Diode Can Opener

The WR1 is a simple handheld device designed to remove the caps from standard laser packages. Many applications, such as fiber pigtailling, can be optimized by having closer access to the laser chip.

Operation is as simple as placing a diode onto the two rollers at the front of the device, lightly applying pressure with the rubber covered grips, and turning the blade actuator (as shown to the right). The precision-ground, hardened steel blade will easily cut through the wall of the diode cap, safely removing it.



WR1



Simple manual can opener removes the cap from most transistor-style laser diode packages.

- Ideal for Ø5.6mm to Ø9mm Packages
- Compatible With TO-18, TO-46, TO-3 Packages, Among Others

ITEM#	\$	£	€	RMB	DESCRIPTION
WR1	\$ 129.00	£ 81.30	€ 120,00	¥ 1,232.00	Laser Diode Can Opener

Kevlar Cutters

- Non-Slip Carbide Steel Blades
- Spring-Loaded Handles Provide Automatic Reopening
- Long Handles Provide Sufficient Leverage When Cutting
- Equipped With a Safety Latch to Close Cutters When Not in Use
- Cushioned Hand Grips

These cutters are designed for cutting the Kevlar threads that are used in the protective jacket of fiber cables. Note that these cutters should not be used for cutting fiber since this will significantly reduce their Kevlar cutting ability.




T865

ITEM#	\$	£	€	RMB	DESCRIPTION
T865	\$ 33.60	£ 21.20	€ 31,20	¥ 320.90	Kevlar Cutter

Diamond Wedge Scribe



S90W

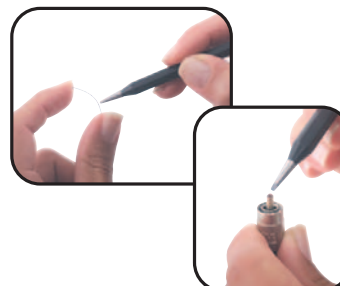

- Cleave Bare Fiber to Produce Optical Quality Surfaces
- Scribe Excess Fiber From the Connector Ferrule in Preparation for Polishing
- 90° Wedge-Shaped Diamond Tip Preferred by Most Optical Technicians

ITEM#	\$	£	€	RMB	DESCRIPTION
S90W	\$ 60.20	£ 37.90	€ 56,00	¥ 574.90	90° Wedge-Shaped Diamond Scribe